 


viewmaster^x

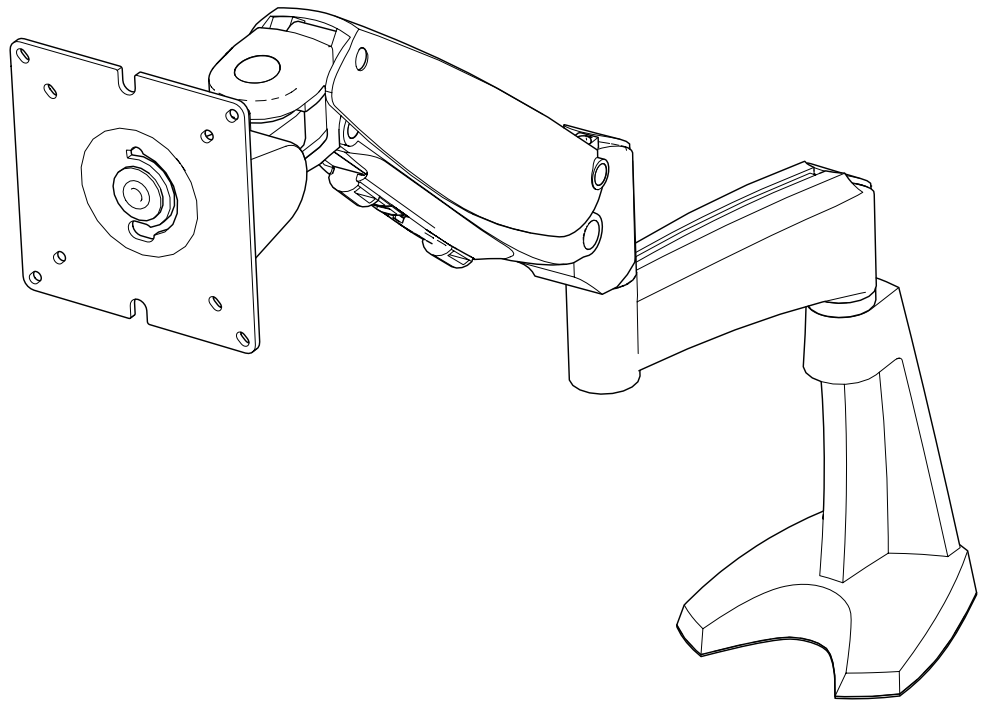

 
 

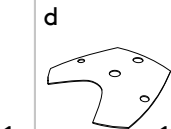 
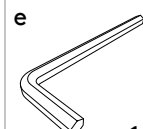 
 
 
 

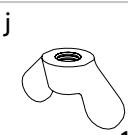 
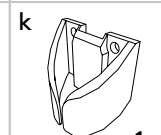 

 
 

 
 
 
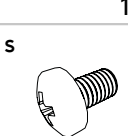 
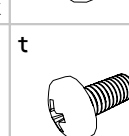 
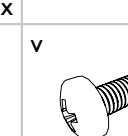 
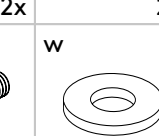 
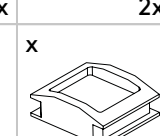 
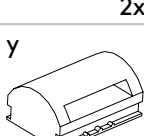 
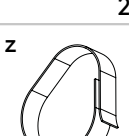 
57.172

v1.0


Installation manual/Installatie handleiding
 Installations-handbuch/Manuel d'installation
 Manuale d'installazione/Manual de instalación
 Copyright ©2021 – Dataflex International BV

T +31 180 515444
 F +31 180 518540
 info@dataflex-int.com
 www.dataflex-int.com


Parts/Onderdelen/Teile/Pièces/Parti/Partes

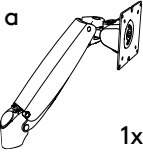a  1x	b  1x	c  1x	d  1x	e  1x	f  1x	g  1x	h  1x	i  3x
j  1x	k  1x	l  2x	m  2x	n  2x	o  2x	p  2x	q  1x	r  2x
s  4x	t  1x	v  4x	w  1x	x  4x	y  2x	z  2x		












 
Required tools/Benodigd gereedschap/Benötigtes Werkzeug/Outils requis/Strumenti necessari/Herramientas necesarias

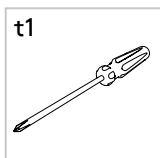












viewmaster^x









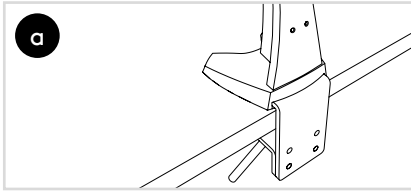 


or/of/oder/ou/o

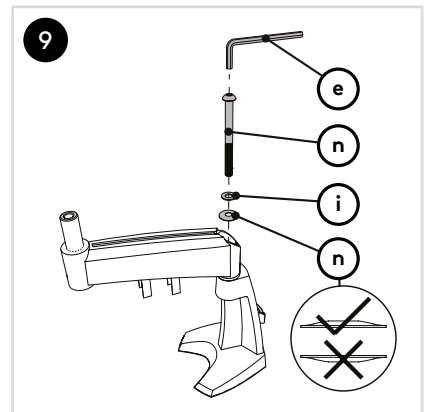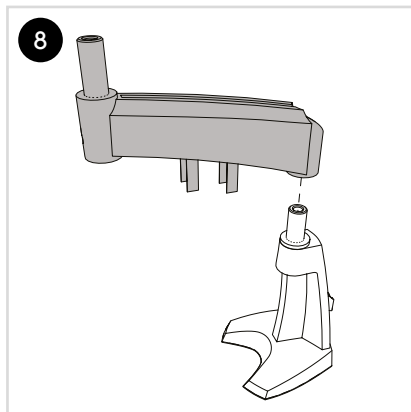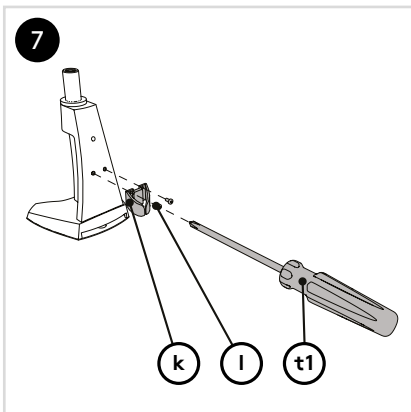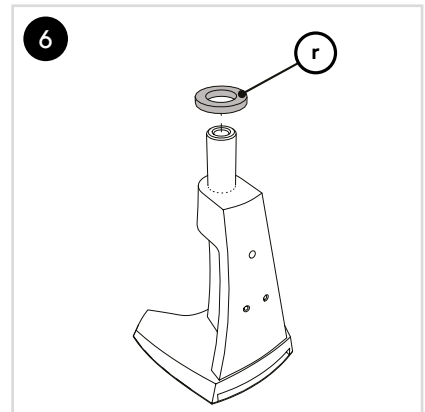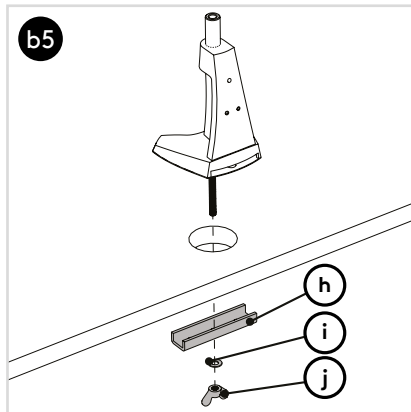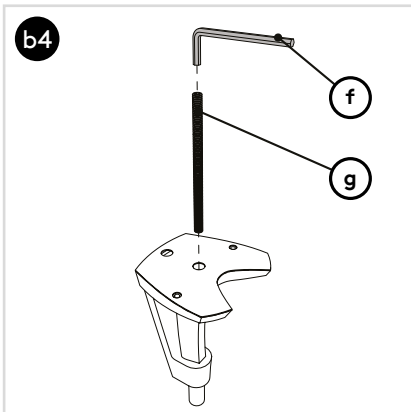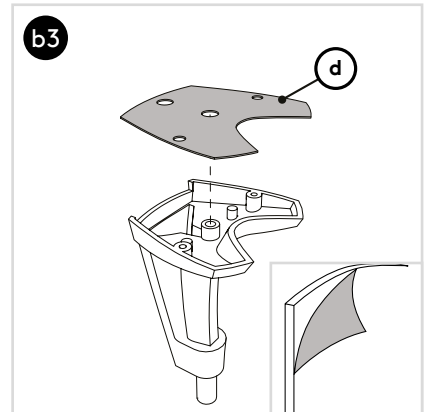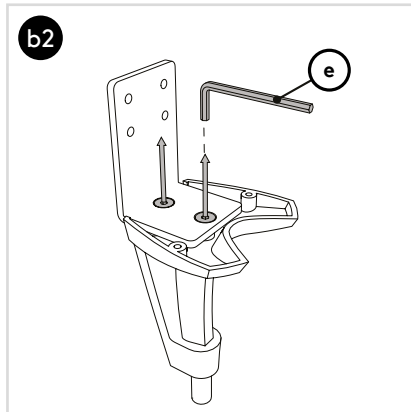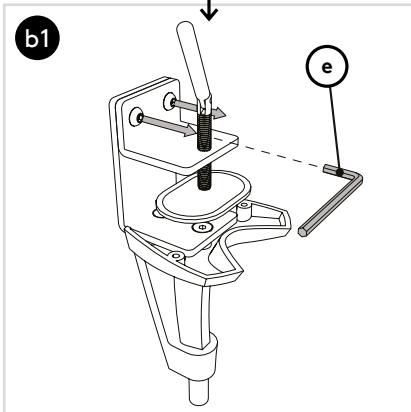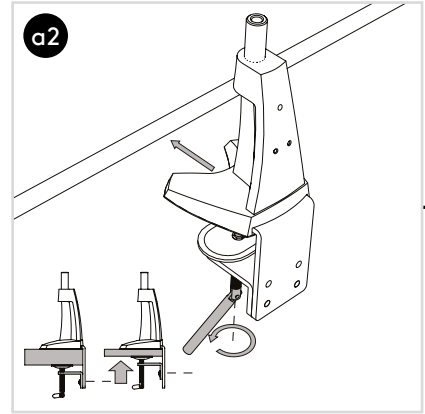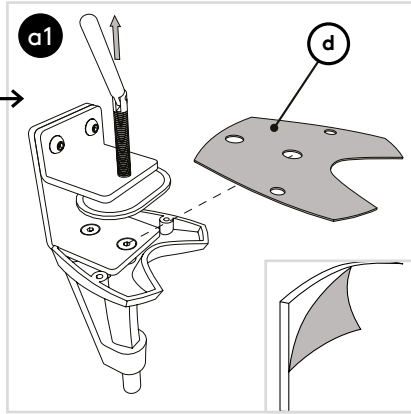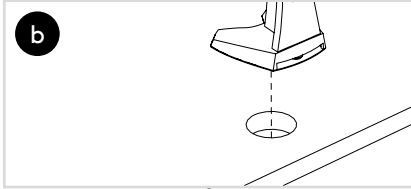            

viewmaster^x

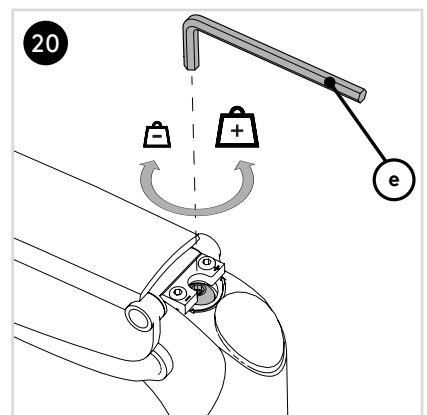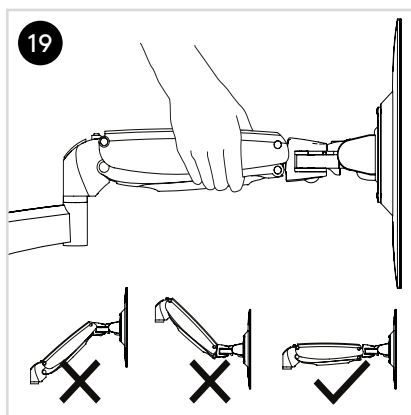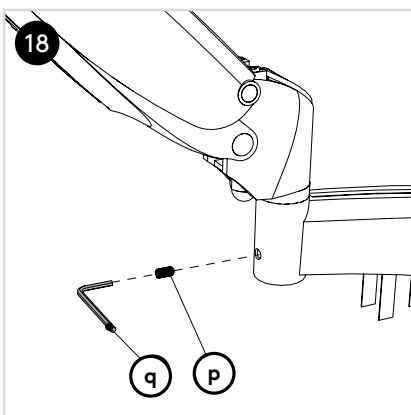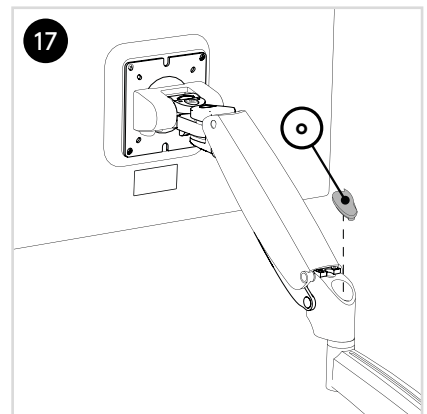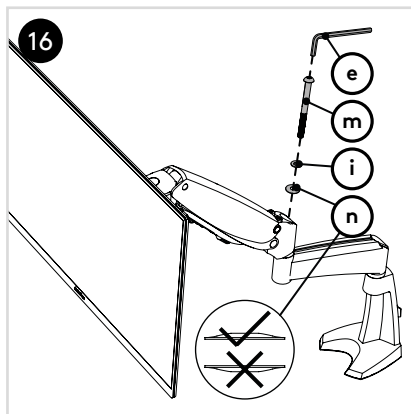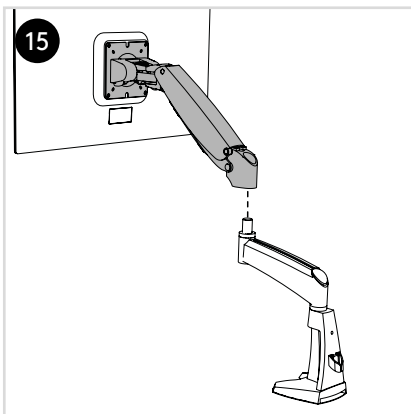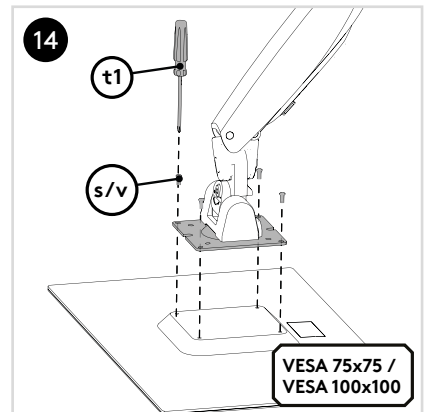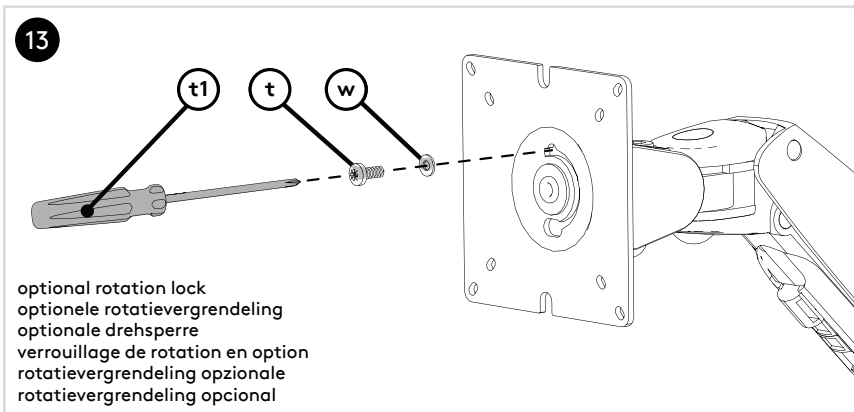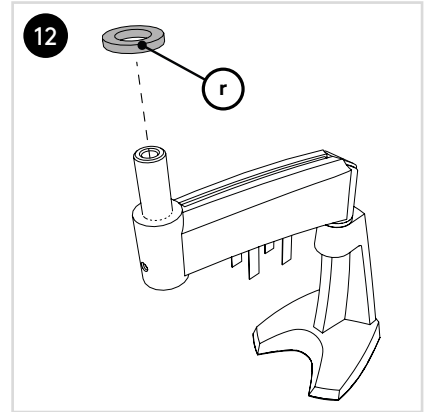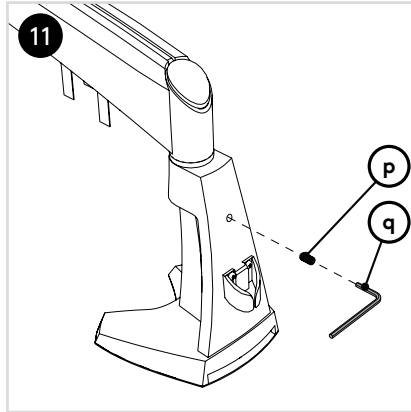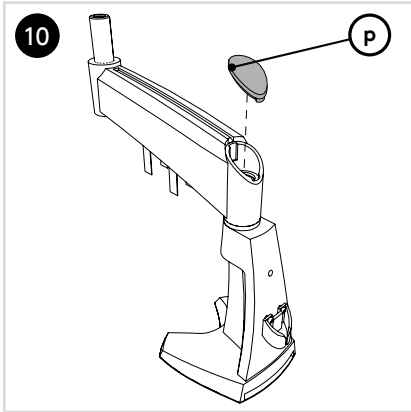           

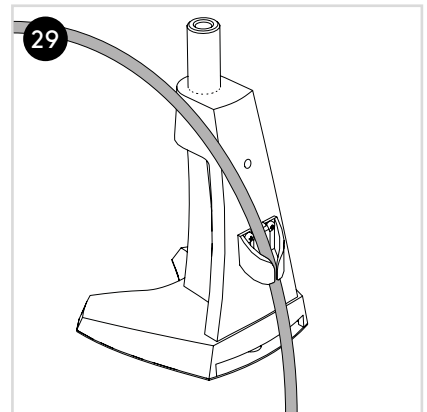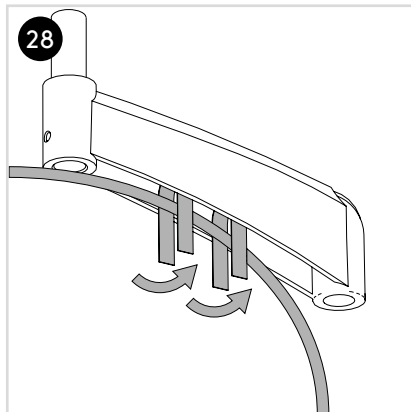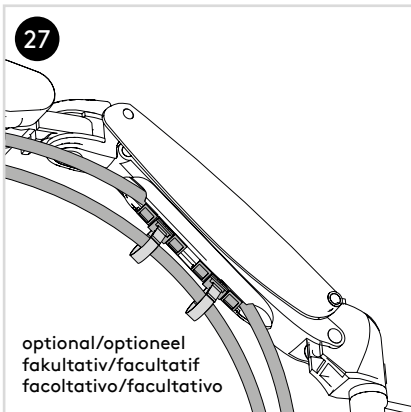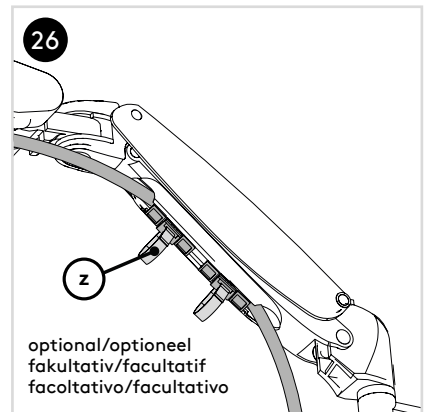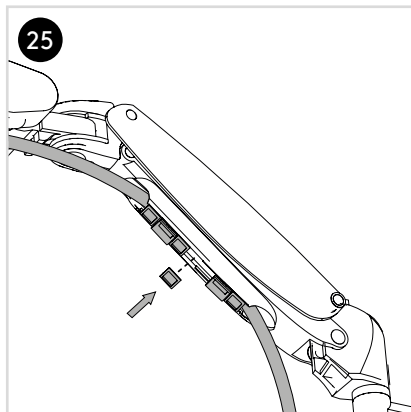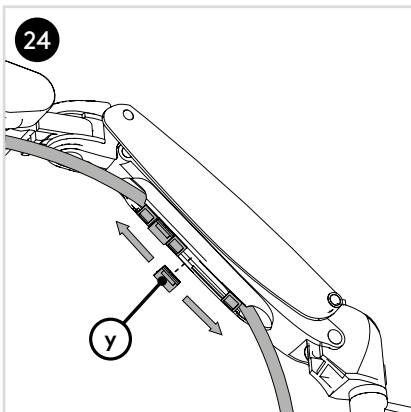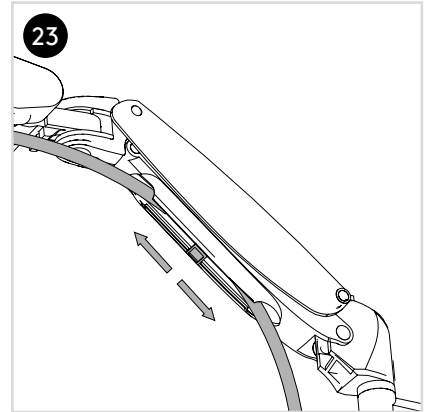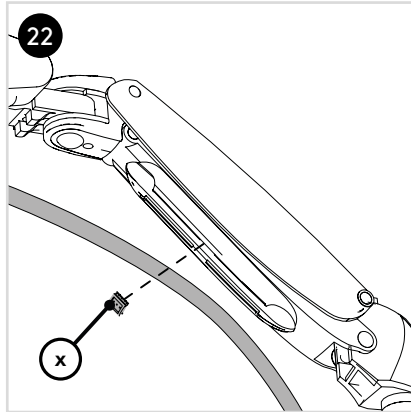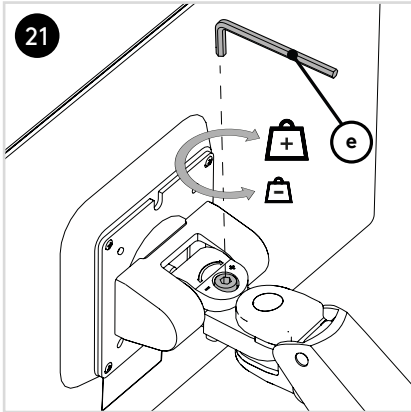         

No rights can be derived from this publication/
Aan deze uitgave kunnen geen rechten worden
ontleend/Aus dieser Ausgabe können keine
Rechte abgeleitet werden/Aucun droit ne peut
découler de cette publication/Dal presente
documento non deriva alcun diritto/Del
contenido de esta publicación no podrá
derivarse ningún derecho